




[www.srmclassicbikes.com](http://www.srmclassicbikes.com)

NORTON

BSA

TRIUMPH

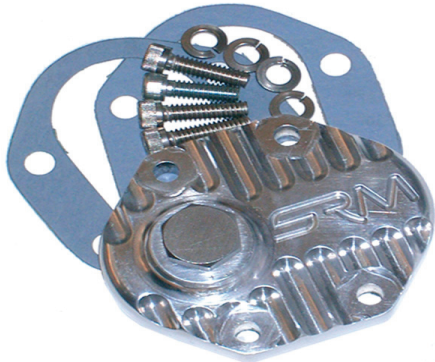

## SRMSF2 fitting instructions

- 1) Remove old sump plate, gaskets and studs
  - 2) Clean old gasket face , and ensure thread holes are clean and in good condition
  - 3) Smear gaskets with grease or sealer, place gaskets and gauze on top of filter plate and fit with the Drain plug near to the drive side ( this is very important).
  - 4) Fit the fixing bolts and washers and tighten up.
- To drain the sump for oil changes, simply remove the stainless steel drain plug and re-fit.